



WOLKENKRAFT®

VITA

USER MANUAL

1

Thank you for purchasing a WOLKENKRAFT vaporizer.

Before your first use of the WOLKENKRAFT VITA, read and follow the instructions carefully. It is recommended that these instructions are put in a safe place for future reference.

WARNING AND PRECAUTIONS

This device is designed and intended for use with legal dry herbs for aromatherapy purposes only. Use with tobacco, nicotine-containing or illegal substances is prohibited. Keep out of the reach of children. Do not use this device if you are pregnant or nursing. The manufacturer/importer will not take responsibility for damages caused by inappropriate, wrong or unreasonable use.

Never use electronic devices near water. Never block or cover ventilation openings. Only use original accessories recommended by WOLKENKRAFT. Maintenance and repair should only be carried out by qualified personnel. To avoid electric shock, do not open the device by yourself. For safety reasons, it is only allowed to have the device opened by qualified personnel. As long as the device is in operation, do not leave it unattended.

DISPOSAL


As for environmental protection, at the end of the device's useful life, owner should recycle separately from the unsorted municipal waste. Waste electronic equipment must not be disposed of as unsorted municipal waste and does not belong in the household waste in particular. Disposal can be made through available local return and collection systems.

WARRANTY

This device is covered by a two years warranty from the date of purchase. Proof of the purchase date is the invoice issued by the retailer, which must state the name of the appliance and the date of purchase.


THIS PRODUCT DOES NOT CONTAIN TOBACCO, NICOTINE OR CONCENTRATE MATERIALS.

OVERVIEW

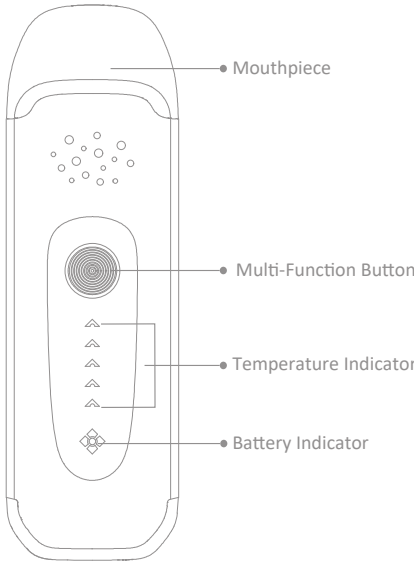

3

ACCESSORIES

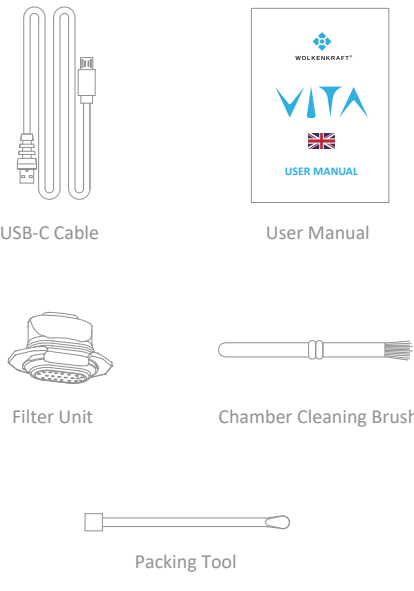

4

SPECIFICATIONS

TEMPERATURE DISPLAY

- 220°C
- 210°C
- 200°C
- 190°C
- 180°C

WOLKENKRAFT VITA features 5 precision temperature settings, from 180 °C to 220 °C. Each step raises the temperature for 10 °C. Double click the function button to switch temperature.

TECHNICAL SPECIFICATIONS:

Size	31*32*100 mm
Battery Capacity	1600 mAh
Charging Voltage/Current	5V/1A
Lock/Unlock	Press the function button 5 times consecutively
Session Time	240 seconds
Temperature Range	5 Settings form 180°C to 220°C
Charging Time	< 2 Hours

WARNING: To protect the battery against weather effects always store WOLKENKRAFT VITA in a dry place.

KEEP OUT OF REACH OF CHILDREN OR UNQUALIFIED PERSONS.

5

USER TIPS

- Turn the device on/off:** Rapidly press the function button 5 times On/Off with vibration feedback.
- Temperature setting:** Switch by double clicking the function button until the preferred temperature LED indicator light turns on.
- Enhance mode:** For customized vaping experience, an enhance mode is available by pressing the function button for 3 seconds when the pre-set temperature is reached. The enhance mode keeps for 5 seconds.
- Automatic shutdown:** After 4 minutes the device will automatically switch off to protect the battery lifetime and avoid overheating.


Quick Battery Check:
Briefly press the function button when the device is switched off, the battery indicator will show remain battery level.

100% to 75%

75% to 25%


25% to 10%

Less than 10%




6

HOW TO USE

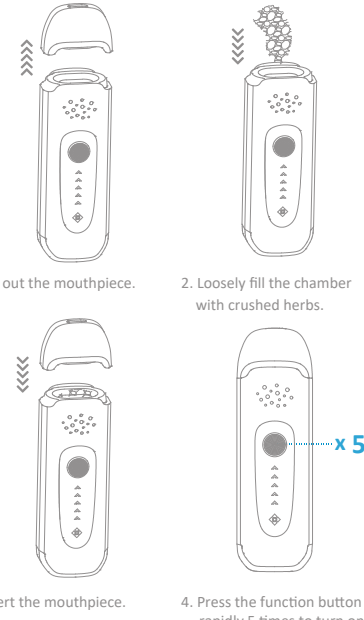


7

5. Select your preferred temperature by clicking the function button twice.

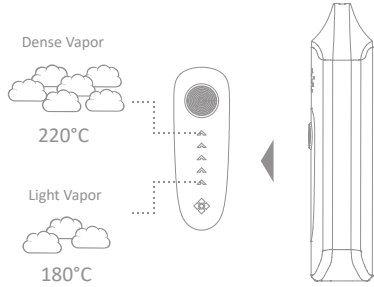


6. When all temperature indicator lights turn to solid lighting with vibration feedback, the device is ready to use.

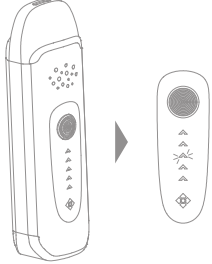


8

HOW TO CLEAN

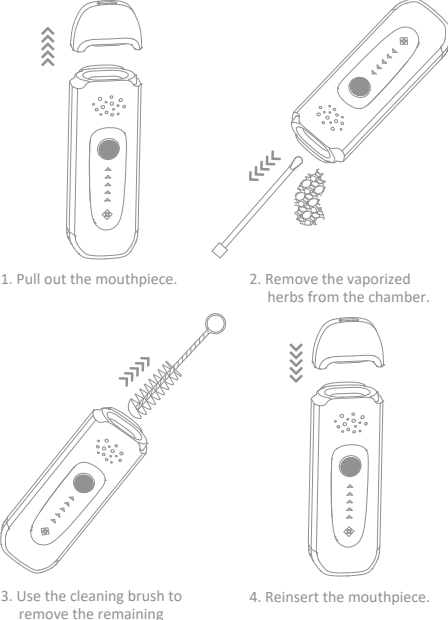

9


HOW TO CHANGE THE MOUTHPIECE FILTER

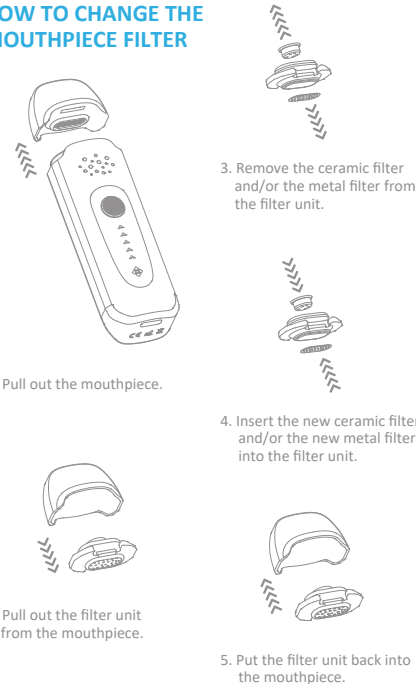

10

CHARGING

- Battery capacity: 1600 mAh, regular USB-C charging, 5V/1.0A suggested.
- Initially charge the WOLKENKRAFT VITA for 2 hours. The LED battery indicator light will turn to blue when the VITA is fully charged.
- If the battery level is low, charge the device with the supplied USB-C cable (e.g. connected to a compatible USB wall adapter).
- Low battery level will be indicated with red and blue LED flashing 3 times in alternate and default to turn off.
- The WOLKENKRAFT VITA can be used exceptionally during the charging process. For a longer battery life this should be avoided if possible.

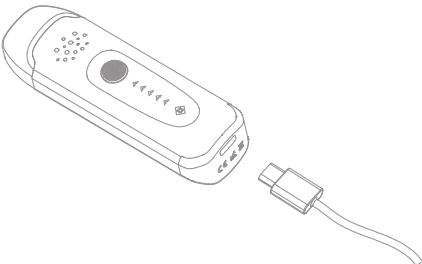

11