

FOCUS V

**CARTA**

EQUIPPED WITH
INTELLI-CORE™

MAX

User Manual



CARTA 2

Welcome to the Focus V Family. Purchasing a CARTA 2 signifies the beginning of an unparalleled consumption experience. We've crafted this manual to ensure you get the most from your device. As you explore its many features, we invite you to share your journey online with the broader community using #FocusFam.

FOCUS V

START UP	1
THE APP	3
TIME AND TEMP SETTING	5
PRESETS	7
SESSION START	9
BATTERY CARE	11
CLEANING	13
TIPS AND TRICKS	17
SAFETY INFO	19
WARRANTY	21

START UP

Starting Up Your CARTA 2:

Press the POWER (O) button five times to power on.

The device will display the startup animation and recall your last settings.

Turning Off Your CARTA 2:

Press the POWER (O) button five times to power off.

Inactivity Protocols:

2 minutes of no use: OLED screen turns off, entering standby mode.

Press any button to exit standby mode. After 10 minutes of no use: Device automatically powers down.

***REMOVE GLASS BEFORE FILLING WITH WATER.
FILL TO JUST ABOVE THE FOCUS V LOGO***



DOWN




UP



POWER

- 1 SET TEMPERATURE
- 2 CURRENT TEMPERATURE
- 3 BATTERY LIFE
- 4 TIMER
- 5 CYCLES COUNT
- 6 DETECTED ATOMIZER
- 7 CURRENT PRESETS SELECTED

HOME SCREEN

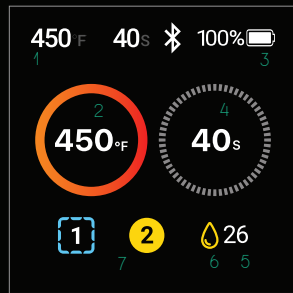

Once powered ON
the display will show
the following indicators.

CONNECTING TO APP

To connect your device to your smartphone via Bluetooth:

Download the App: Scan the provided code to find the FOCUS V app. Install on your smartphone.

Turn On CARTA 2: Power up your device.

Enable Bluetooth: Ensure Bluetooth is activated on your phone.

Launch & Connect: Start the FOCUS V CARTA app. The app will auto-search and prompt you to select "CARTA 2".


Confirmation: Both the app and device will indicate a successful connection.

Take Control: You can now use the app to customize / manage your CARTA 2.

Available on:



Earn XP, get new device features, exclusive rewards, deals, and more!

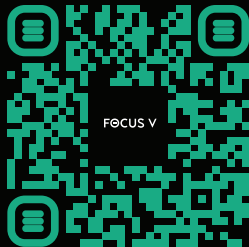


TIME & TEMPERATURE SETTINGS

Adjusting Temperature Settings:

From the home screen, press the DOWN (-) button to access temperature settings. Use UP (+) or DOWN (-) to set your preferred temperature. The OLED screen updates as you adjust. Once set, simply wait to return to the home screen to confirm your chosen setting.


Setting Session Duration:

From the home screen, press the UP (+) button to enter time settings. Adjust your session's duration using UP (+) or DOWN (-). Wait to return to the home screen to confirm your chosen setting.

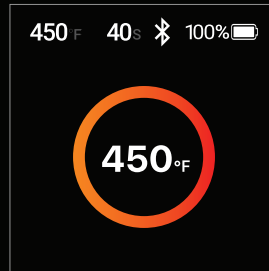

TEMP SETTING

press the DOWN (-) button, then use up/down to adjust.

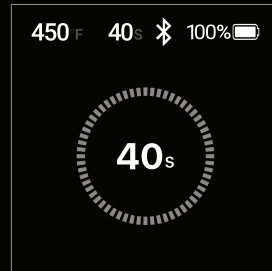

TIME SETTING

press the UP (+) button, then use up/down to adjust.



Concentrate
365°F - 635°F
20s - 120s

Herb
275°F - 500°F
120s - 240s

LED AND SESH PRESETS


Adjusting Sesh Presets

Your Focus V CARTA 2 comes with five default SESH presets as well as a custom user setting. To cycle through the device's stock sesh presets, press and hold the POWER (O) button. Cycle through the options using the UP (+) or DOWN (-) buttons.

*Note: 'Preset 0 is your custom setting.

Adjusting LED Presets

Your Focus V CARTA 2 has five LED presets available to select from. Press the POWER (O) button three times to enter the LED settings. Use UP (+) or DOWN (-) to navigate the LED presets. Select 'OFF' to deactivate all LEDs.

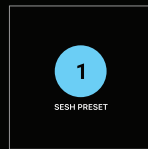


Concentrate Presets:

- 1: **BLUE** 480F, 60s
- 2: **YELLOW** 495F, 55s
- 3: **GREEN** 515F, 50s
- 4: **PURPLE** 535F, 45s
- 5: **RED** 565F, 40s

Herb Presets:

- 1: **BLUE** 340F, 240s
- 2: **YELLOW** 350F, 240s
- 3: **GREEN** 370F, 240s
- 4: **PURPLE** 390F, 240s
- 5: **RED** 410F, 240s

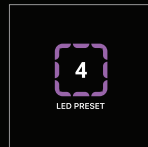

Customize your SESH and LED presets with the FOCUS V app.

START YOUR SESSION



After configuring your session settings, double-tap the POWER (O) button to start your session. Your CARTA 2 will vibrate to indicate it has started heating and the OLED screen will display the rising atomizer temperature.

Upon reaching the chosen temperature, the device will vibrate again, flashing the LEDs and signaling the start of your session's countdown sequence.

NOTE:

Anytime during the session, you can double click the POWER (O) button to extend the session countdown by 10 seconds.

To cancel your session, press the POWER (O) button once at anytime during the countdown sequence.

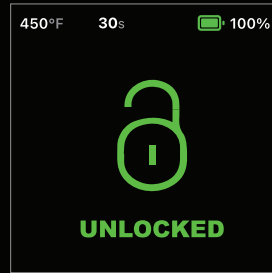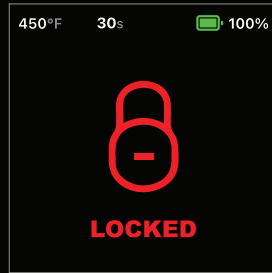

Pressing the POWER (O) button four times will enable the **BUTTON LOCK** feature, preventing accidental changes to settings. **UNLOCK** by pressing the POWER (O) button four times.

BATTERY AND CHARGING

SPECS:

Li-ion Polymer Battery
2000mAh - 7.4V

Charging current should not exceed 5V/2A.
Only use approved AC/DC adapter.

- Avoid direct sunlight, heat, or fire.
- Do not remove, disassemble, or modify the battery.
- Avoid excessive physical shock or vibration.
- Do not immerse in water.
- Keep in a cool, dry, and well-ventilated environment.
- Only use the approved, appropriate power source.
- Do not charge the battery for more than 4 hours.
- The battery should be charged within proper temperature, current, and voltage ranges specified.
- Please follow the local regulations for proper disposal of batteries.



Wireless charging bank
sold separately.

NOTE: ALWAYS FULLY CHARGE THE DEVICE
BEFORE USING FOR THE FIRST TIME



LITHIUM
POWER



USB
TYPE C




WIRELESS
CHARGING

CLEANING

MAKE SURE THE ATOMIZER IS COOL AND SAFE TO TOUCH BEFORE HANDLING

Regular cleaning and maintenance of your FOCUS V CARTA 2 will contribute to optimal performance and longevity of your device. Make sure to swab excess material from your FOCUS V CARTA 2 after every dab to minimize the frequency of the deep cleaning process outlined below.

Scan the QR code to view our video guide.

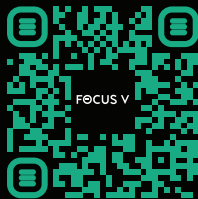

Cleaning Part 1: Glass Tops

Ensure your Focus V CARTA 2 is powered off before starting the cleaning process.

Gently remove the glass top from its base.

Empty any leftover water, then give it a gentle rinse with warm water.

Fill the glass top with 70% Isopropyl Alcohol.

Securely cover the openings with the included stopper or your fingers, ensuring no spillage.

Shake the glass with vigor, allowing the alcohol to dissolve residues or stains.

Empty the alcohol, give the glass top a thorough rinse with water, and dry it. Once dry, you can reattach it to the device.

Cleaning Part 2: Base

Ensure the glass top is already detached before beginning the cleaning process.

Start by unscrewing the atomizer from the base, turning counterclockwise.

Dampen a lint-free wipe with 70% Isopropyl Alcohol, and gently clean any visible residues from the base. Be quick to dry the base immediately after wiping, avoiding prolonged liquid contact.

Pay special attention to the atomizer contacts and airpath. A cotton swab dipped in alcohol works best for these areas.

Be gentle around the OLED screen, buttons, and the entirety of the base.

Finish by wiping down with a dry lint-free cloth.

Cleaning Part 3: Atomizer

Before you begin, ensure you have 70% Isopropyl Alcohol on hand.

Initiate by gently cleaning the threads of your FOCUS V CARTA 2's atomizer using a cotton swab moistened with the 70% Isopropyl Alcohol.

Detach the silicone sleeve and carb cap from the atomizer. Delicately swab the inside of the atomizer insert with 70% Isopropyl Alcohol.

Submerge the atomizer in the 70% Isopropyl Alcohol and allow to soak for about 5 minutes. Gentle agitation can help in thorough cleaning.

Post-soak, retrieve the atomizer, and let it air-dry. Inspect closely; if residues persist, consider repeating the process.

Once completely dry and cleaned, reassemble your atomizer. Ensure all components are secure and pristine. For best results, run a brief, low-temperature session before regular use.

TIPS & TRICKS

Loading:

- The recommended loading size is 0.1 to 0.3g to avoid overfilling. If you want to vaporize more, we recommend running multiple sessions.
- Avoid loading material on sides or near top of chamber. Use the FOCUS V SABER Electronic Dab tool to ensure proper loading and minimal waste.

Inhaling:

- Slow, smooth pulls provide the most consistent vapor production.
- If your feeling restricted airflow, make sure the atomizer is clean, the glass top is aligned properly and the carb cap is clear from obstructions.
- If you want to modulate airflow, you can do so by slightly covering your carb cap opening.
- Adjust your timer settings to properly match the length of your hit and not more. This saves battery life and prevents overheating.

Personalize:

- Use the App to customize presets and upload screensavers to make your device one of a kind.
- Explore custom accessories from focusv.com and the community to further personalize your experience.

Clean Up:

- Keep your chamber clean by using a swab to absorb leftover residue after every session.
- Warm 70% Isopropyl Alcohol works better at dissolving residue.
- Check your atomizer contracts and airpath regularly.
- Never use any abrasives or highly caustic cleaners on your device.

Battery Care:

- Make sure the device is off when not in use.
- Keeping the battery from discharging below 60% will prolong the lifespan of the cells.
- Do not charge longer than is needed.
- Only use an approved USB power source.

IMPORTANT SAFETY INFORMATION

Use at your own risk.

Always insert your glass top at an angle. (Inserting it flat can result in your CARTA 2's base cracking)

Do not overfill the glass top with water.

Do not blow air into the glass top when it is filled with water and attached to your CARTA 2's base.

Do not remove the silicone in your base. Removal of the silicone will automatically nullify and void your CARTA 2's warranty.

Do not overload the wax chamber. Overflow of concentrate can cause spill over to the atomizer, damaging heating element.

To avoid damage, please keep the interior of your atomizer cleaned and properly maintained.

Allow the chamber adequate time to cool before touching it.

Never touch your atomizer while it is in use.

Do not overcharge your battery/device. Never use a damaged battery/device.

Never leave the device charging unattended.

Never expose your batteries/device to extreme temperatures

Do not expose batteries/device to liquids.

Always charge batteries/device on a fireproof surface.

Immediately stop use if the batteries produce an unusual odor, emit heat, smoke, change in color or shape, or appear irregular in any way.

Keep away from pets and/or children.

WARRANTY

CARTA 2 Base: 1 Year

SABER: 6 Months

INTELLI-CORE MAX Atomizer: 6 Months

All claims must be made through FOCUS V Customer Support.

Focus V warrants this device against any defects in materials used to produce this product for a period of one year, from the retail purchase date. This warranty can only be used by the original end-user. If a claim is received and determined to be valid, Focus V will either repair the product defect or exchange the product. The Limited Warranty Period begins on the original purchase date. A claim under this warranty is only eligible if it is made within the claim period.


Defective products must be returned and received by our warehouse within 30-days of the original delivery. Customers will be responsible to pay for shipping defective products after the 30-day period. We will pay for shipping on all domestic replacement orders to the customers.

*If the product passes inspection upon arrival the customer is entitled to pay for return shipping.


This Limited Warranty will NOT apply under the following circumstances:

- If damage is cosmetic, including scratches, dings and use of chemicals on the base, or if issue is caused by normal wear and tear. (For example, Limited Warranty does not cover the standard degradation of atomizers or batteries.)
- Where customer's failure to properly maintain the Product is cause of issues. Customers should note that atomizers are replaceable parts with an expected life of 3 – 6 months, and they require regular cleaning and maintenance.
- If Focus V determines that the Product has been improperly used, altered or tampered with in any way. Customer assumes the responsibility to follow instructions provided in user's manual. Examples of misuse include: Using incorrect charging hardware, Overcharging the unit, Overfilling the unit, Disassembling the base, Subjecting to extreme conditions, etc.
- If customer misrepresents their information, the serial number on the product has been altered, or removed, or if warranty claim is made fraudulently.
- For any Focus V Products that are resold by the customer or that are purchased from unauthorized resellers.

Register your device.

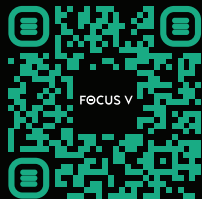

Find us online at:

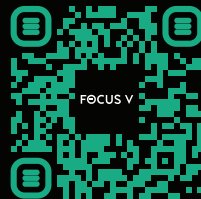

For more help and support, please visit:
<https://support.focusv.com/hc>

TIPS & TRICKS

Loading:

- The recommended loading size is 0.1 to 0.3g to avoid overfilling. If you want to vaporize more, we recommend running multiple sessions.
- Avoid loading material on sides or near top of chamber. Use the FOCUS V SABER Electronic Dab tool to ensure proper loading and minimal waste.

Inhaling:

- Slow, smooth pulls provide the most consistent vapor production.
- If your feeling restricted airflow, make sure the atomizer is clean, the glass top is aligned properly and the carb cap is clear from obstructions.
- If you want to modulate airflow, you can do so by slightly covering your carb cap opening.
- Adjust your timer settings to properly match the length of your hit and not more. This saves battery life and prevents overheating.

Personalize:

- Use the App to customize presets and upload screensavers to make your device one of a kind.
- Explore custom accessories from focusv.com and the community to further personalize your experience.

Clean Up:

- Keep your chamber clean by using a swab to absorb leftover residue after every session.
- Warm 70% Isopropyl Alcohol works better at dissolving residue.
- Check your atomizer contracts and airpath regularly.
- Never use any abrasives or highly caustic cleaners on your device.

Battery Care:

- Make sure the device is off when not in use.
- Keeping the battery from discharging below 60% will prolong the lifespan of the cells.
- Do not charge longer than is needed.
- Only use an approved USB power source.

FOCUS V

Thank you for choosing FOCUS V. For your consideration,
please use the QR Codes below to view our line of
products and accessories.

